


Programming Tumo Drapery Motors

Handsender Layout

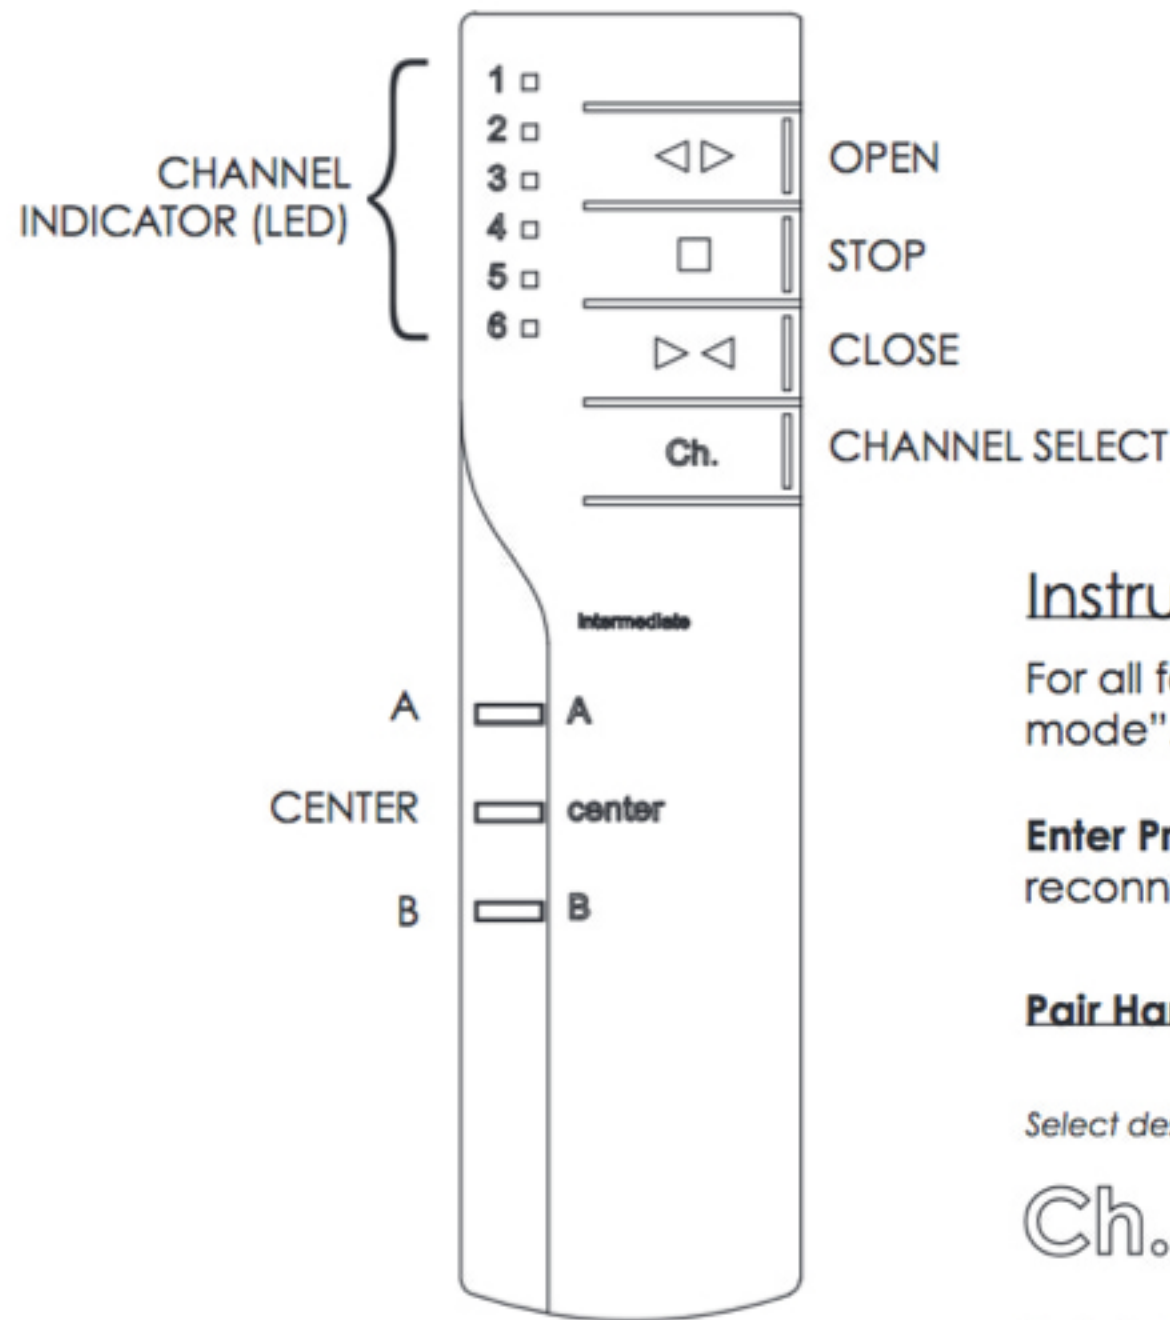

Instructions

For all following programming commands, the motor must be placed into "program mode".

Enter Program Mode = Disconnect power to the motor for 30 seconds, then reconnect. Motor stays in program mode for 90 seconds.

Pair Handsender to Motor / Learn Channel Expected Response:

Select desired channel, then hold Open and Close.

Ch. → ◀▶ + ▶◀

- The handsender will give a slow blink
 - After 3-5 seconds, the motor will jog
 - Motor will now work on this channel
- Note: Each motor can learn up to 4 channels

Delete Channel from Motor

Select desired channel, then hold Stop and Open.

Ch. → □ + ▶◀

- The handsender will give a slow blink
- After 3-5 seconds, the motor will jog
- Motor will no longer respond to this channel

Delete All Channels

Hold Stop and Close.

□ + ▶◀

- The handsender will give a slow blink
- After 3-5 seconds, the motor will jog
- Motor will no longer respond to any channel

Reverse Motor Direction

Hold Stop and Close.

A + B

- The handsender will give a slow blink
- After 3-5 seconds, the motor will jog
- Travel direction is now reversed