


Instructions to restring a split draw traversing system

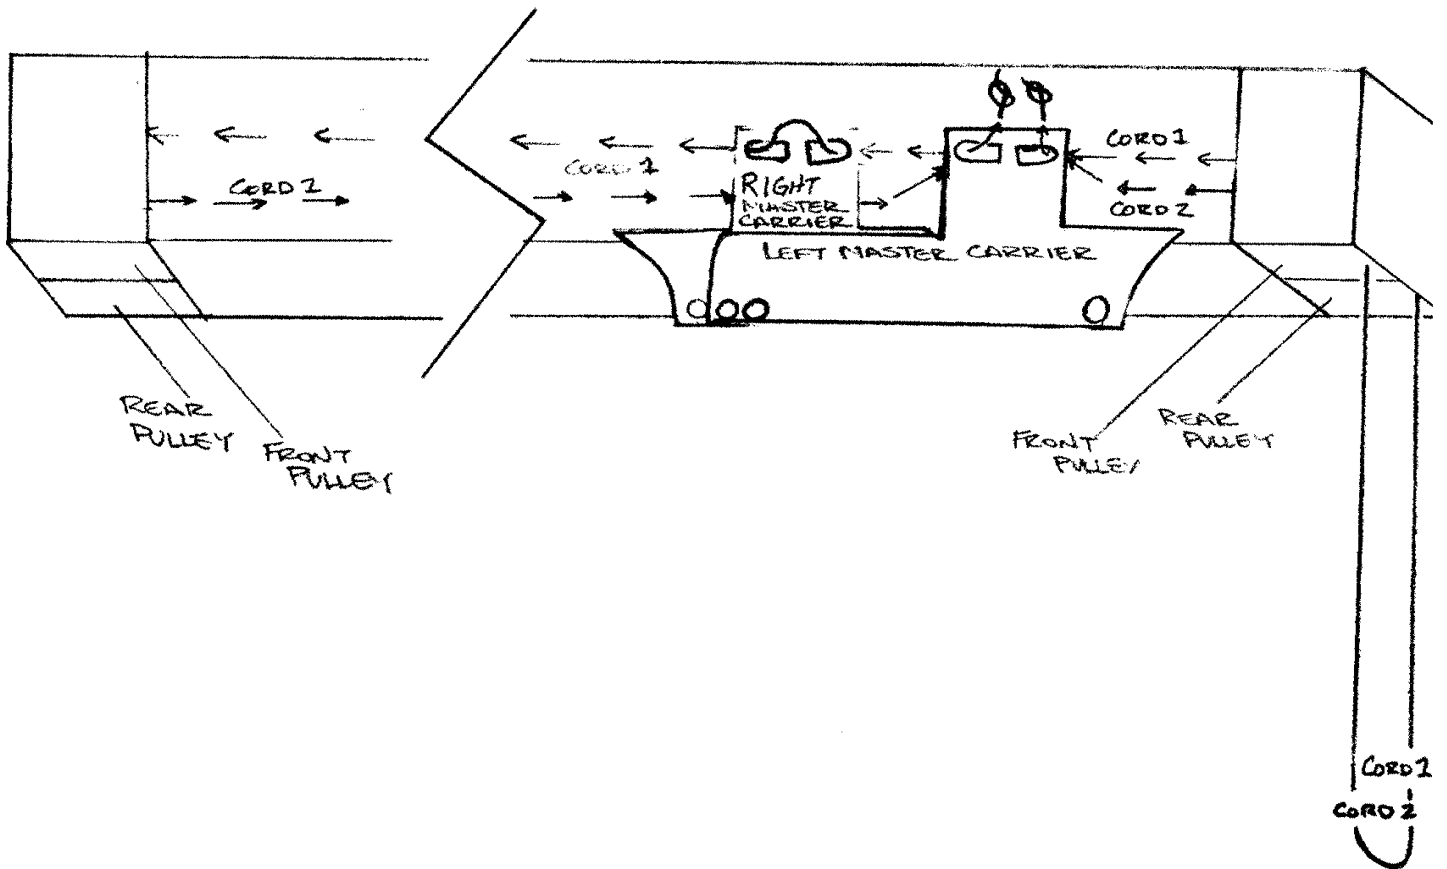

Steps to restring a split draw traversing system

- 1) Run one end of the cord (cord 1) through the rear pulley on the right hand side, making sure that the cord goes over the top of the pulley.
- 2) Run the cord under the left master carrier and loop it through the holes in the right master carrier.
- 3) Loop the cord around the rear pulley on the left hand side, making sure the cord loops around the pulley.
- 4) Run the cord underneath the right master carrier and through the left hole on the left master carrier.
- 5) Tie a knot in the cord large enough that it will not pass back through the hole in the master carrier.
- 6) Run the other end of the cord (cord 2) through the front pulley on the right hand side, making sure that the cord goes around the pulley.
- 7) Run the cord through the right hole in the left master carrier.
- 8) Tie a knot in the cord large enough that it will not pass back through the hole in the master carrier.

Please note that this is for a left hand draw. The unit will appear opposite as it will be built from the back.